


Edition	Manual	Chapter	Page
2008-05-19	Workshop Manual, Stiga Park	7 Electrical System	28


7.2.26 The motor can be started without the brake pedal is pressed

All machines except machines with manual gearboxes

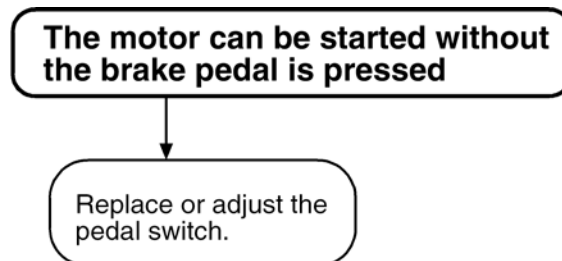


7.2.27 The motor can be started with the mover deck activated

All machines with mechanic PTO

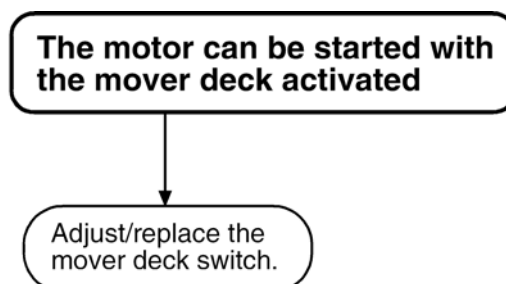

7.2.28 The motor can be started with a gear activated


Machines with manual gearboxes

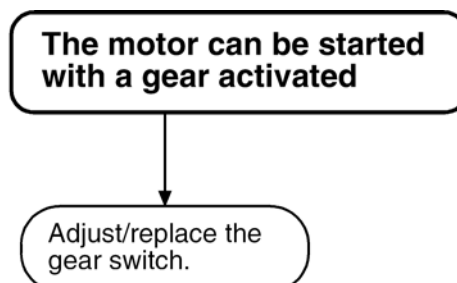

Edition	Manual	Chapter	Page
2008-05-19	Workshop Manual, Stiga Park	7 Electrical System	29


7.2.29 The motor does not stop when the operator leaves the seat and the mover deck is activated

All machines with mechanic PTO

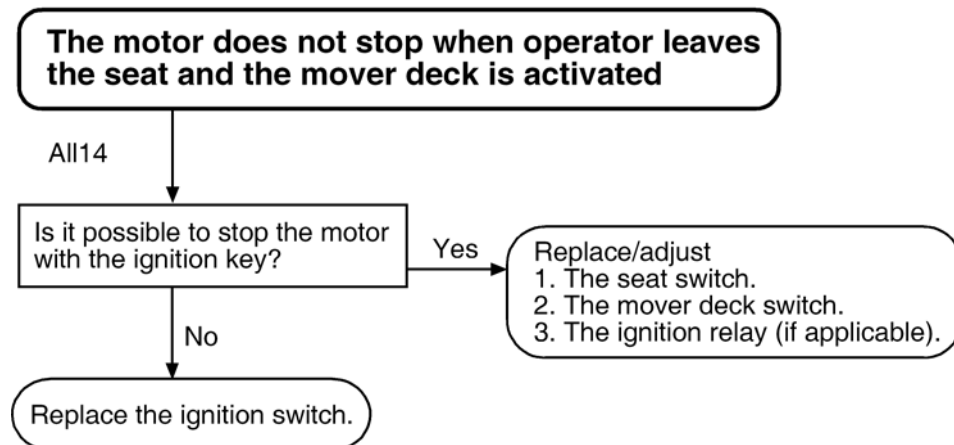


7.2.30 The PTO clutch does not disengage when the operator leaves the seat and the mover deck is activated

All machines with electric PTO clutch

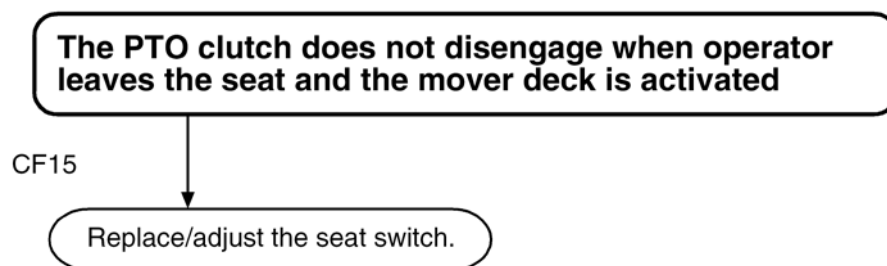


Edition	Manual	Chapter	Page
2008-05-19	Workshop Manual, Stiga Park	7 Electrical System	30

7.2.31 The speed cruiser does not disengage when the brake pedal is pressed

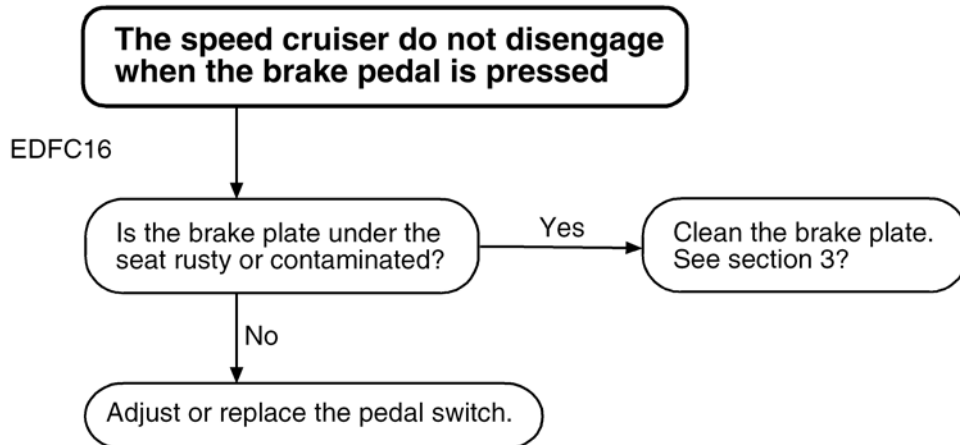

7.2.32 The motor does not stop after a few minutes when the shut off valve cable is disconnected

All machines with electric shut off valve in the fuel system

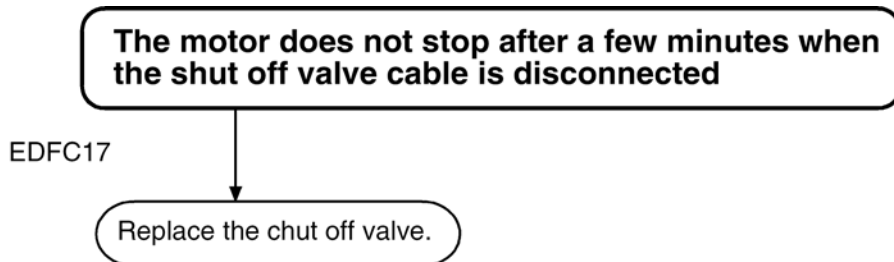

Edition	Manual	Chapter	Page
2008-05-19	Workshop Manual, Stiga Park	7 Electrical System	31

7.3 Repair and replacements




Warning

Do not wear rings, metallic bracelet, chain round the neck or similar metal objects when working with the electrical system. It can cause short-circuit, burns and fire.

7.3.1 Replacement of switches

All switches are pressed into place in their rectangular holes at the control panel. To change a switch proceed as follows:

1. Remove the actual cover to get access to the switch.
2. Press the fixation pig at the connector and pull the connector from the switch. See the figure. Some connectors have 2 pigs.
3. Press the fixation tongues on both sides of the switch against the switch. Use a screwdriver or similar and work up the switch. See the figure.

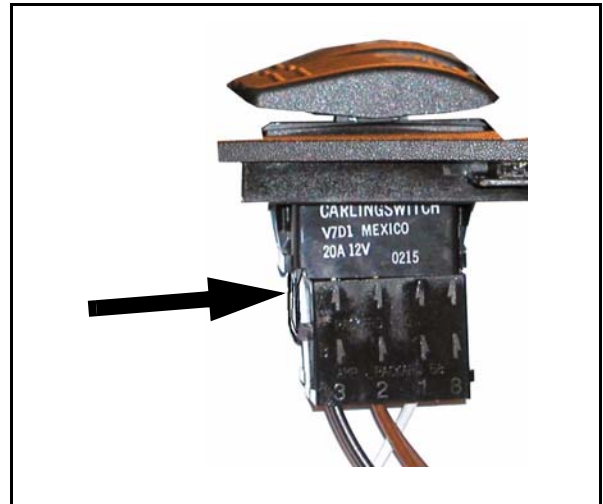

7.3.2 Replacement of switch knob

To replace the switch knob, there is a special tool available. Regarding reference number, see the spare parts list

Remove the knob by pushing in the tool backwards and press until the knob jumps up.


The knob is easily assembled by pressing it down in its hole in the switch.

7.3.3 Connections

The machine is equipped with three kinds of connectors:

- Fixed connectors in plastic holders.
- Tab connectors
- Screw connectors

All connectors shall be kept free from contamination, corrosion and damp.

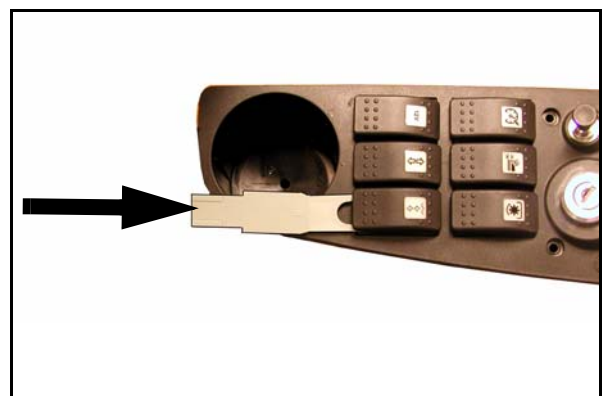


Edition	Manual	Chapter	Page
2008-05-19	Workshop Manual, Stiga Park	7 Electrical System	32

Fixed connectors in plastic holders

To remove the connectors from the plastic holder, put a small screwdriver behind the connector, hold the cable and pull out the connector.


See the figure.

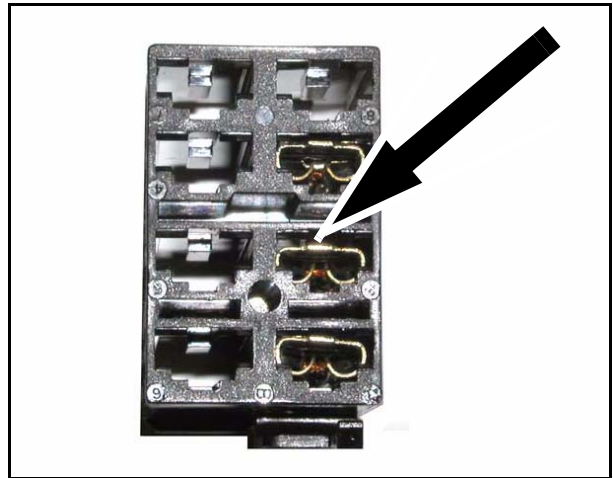

Tab connectors

To restore tab connectors if bad crimp forces occur, e.g. after a long time of use, the connector can be pinched by a pliers.

See the figure.

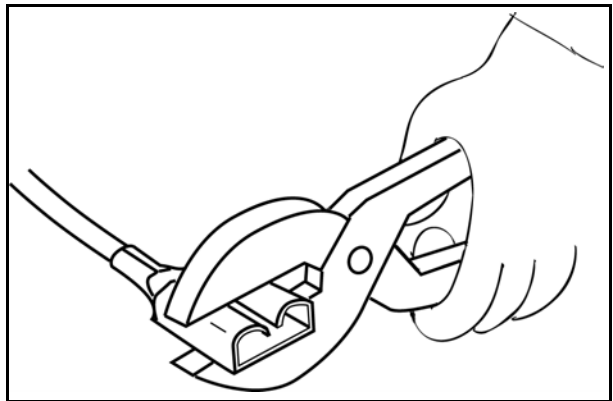

Screw connectors

When cables shall be connected into screw connectors, the cable shall be stripped off 5 mm only. No metallic conductor is allowed to be exposed outside the terminal.



Warning!
Exposed conductors can cause short-circuit and fire.

